 


C. Set the Fragrance Concentration

6. Press [MODE], the LCD screen will display "SCENT WORK". Use the UP/DOWN buttons to set the spraying seconds you want. Have options from 5 secs.min 300 secs.max.



7. Press [MODE], the LCD screen will display "SCENT PAUSE". Use the UP/DOWN buttons to set the Pause seconds you want (Min. 5 secs to Max.300 secs)




Example: setting the diffuser work time to:5 secs on (WORK), 300 secs off (PAUSE)

The diffuser will alternate between active (SCENT WORK) mode and stand-by (SCENT PAUSE) mode for the duration of the operation period. To increase fragrance concentration; increase the work time, or decrease the pause time.

8. Press [MODE] to complete set up for all Events by repeating above steps from 2-7 for each additional events (up to a maximum of 4).

There are 4 Events, shown below

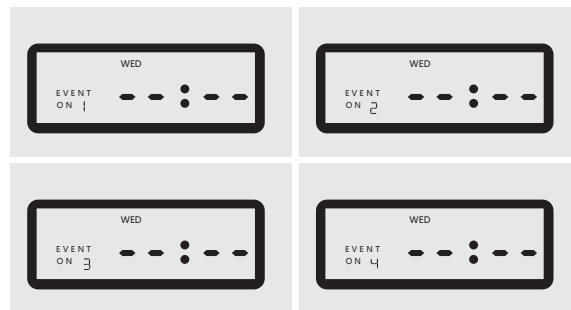

D. Lock & Unlock

 
[UP] [DOWN]: Lock & Unlock screen : Press [UP] [DOWN] button together and hold it for 5 seconds to Lock & Unlock the LCD screen.

LCD screen will flash twice when it's locked successfully.

E. Reset

Press [SET] button for 15 seconds to Reset. The default setting mode is only 1 event: Work every day, Working period 08:00-22:00, working 60 seconds, pause 60 seconds.

3. Fragrance oil installation and replacement



1. Use the key to open the cover.




2. Remove the cap from the oil bottle and attach the atomizer.



3. Put the oil bottle and atomizer into the machine, close the cover.

4. Liquid level sensing function

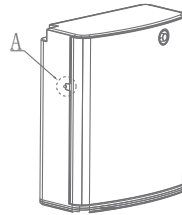

When the indicator light is red, it indicates low oil level (below 65ml±20%).

! Attention


1. The Scent Diffuser machine must be operated and maintained in accordance with the enclosed user manual.
2. Please refill the fragrance oil in time, forbidden to make the machine working without oil for long time.
3. DO NOT tilt the machine when replacing the fragrance oil.
4. DO NOT mix the fragrance oil refill with water.
5. Please ensure you tighten the fragrance oil bottle fully when replacing.
6. The machine should be cleaned (Use the bottle with alcohol to run the machine for 10-15 minutes) in every 2-3 months under working status.

Hygiene 4 You d.o.o.

HOTO TOWER, Savska cesta 32, 10000 Zagreb, Croatia, EU

☎ +385 91 7921 152 ✉ info@hygiene4you.com

HYGIENE 4 YOU Atmos Scent Diffuser

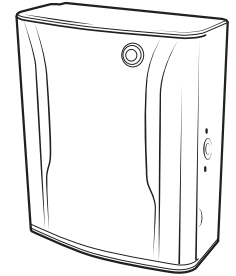


Brief Instruction

This is an economic scent diffuser machine that is suitable for middle coverage commercial places by creating a fragrant atmosphere. It has advanced cold air diffusion technology to transfer the liquid aroma oil into the air and can spread quickly to the environment through the aromatic airflow.


Technical Specifications

Weight	1.4 kg	3.08 lb
Voltage	DC 12V	
Power Level	7W	
Noise Level	<46 dBa	
Scent Coverage	600-1000 cbm / 200-300 sqm / 2000-3000 sqft	

Installation

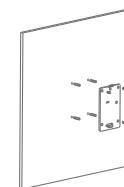

Locating the wall-mounted hanging board position and use M4*12 screws to drill holes, insert the anchors in to the hole, and fix the hanging board to the wall.

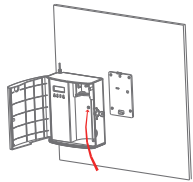

Use M3*6 machine screws to fix it after the machine is hanged

M3*6 machine screw

Accessories




Key Adapter Screw PE gasket Manual Hanging board

Operating Steps

1. Connect to power

The power of this unit can supplied by:

Connect the power with a wire to 12V power socket and [DC POWER IN] on left side of the device.

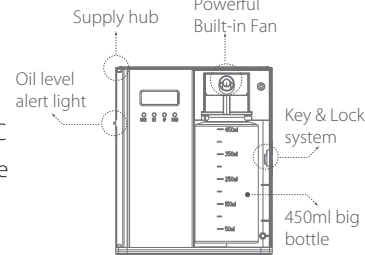

1. ON shows the Scent Diffuser is in power "On" state.



2. OFF shows the Scent Diffuser is in power "Off" state.



3. WORK shows the machine is Spraying time.




4. PAUSE shows the machine is Pausing time.



2. Working Periods Setting

The Fragrance Device is to be set 4 work periods, also can be allowed to choose the workdays according to users' requirements.

1. MODE	To change from one event to another event.
2. SET	By pressing it to do any setting, as for time setting (hour, minutes), work days and so on.
3. UP/DOWN	Slide it to adjust the time data, scent concentration data and the choice of workdays.

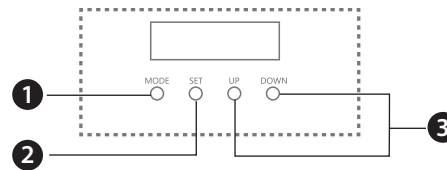

A. Set the System Time

1. Adjust the system time to be in accordance with the local time, and the time is 24-hours system.



2. Press [SET] for the first time, the hour figure flash, press [UP/DOWN] to adjust the hour.



 
3. Press [SET] for the second time, hour setting ends and minute figure flash, press [UP/DOWN] to adjust the minute.



Press [SET] for the third time, minute setting ends, the work day figure flash, press [UP/DOWN] to adjust the work days. Press [SET] for the fourth time, the system time and work day setting ends.

B. Set the Operation Periods

1. Press [MODE], the LCD screen will light up and display "EVENT ON" Means the event 1 On.



2. Press [SET], the hour will flash allowing you to adjust the start time for period 1. Use the UP/DOWN buttons to set the hour.



3. Press [SET] to save the hour setting, move to the minutes Use the UP/DOWN buttons to set the minutes.



4. Press [SET] to set the work day, the work day option will flash. Use the UP/DOWN buttons to select the work day options. Options as below chart. Press [SET] to save.



Example: setting the start time to 1:30pm on Wednesday

! Remarks!

- 1 When setting the work period, the close time is not allowed to be set before the open time.
- 2 If the working period need to cross the '00:00' point, it will need to set into 2 different events.

Work day choice: to set the work days

- | | |
|----------------------------|-------------------------------|
| ① From Monday to Wednesday | ⑩ Thursday |
| ② From Tuesday to Thursday | ⑪ Friday |
| ③ From Monday to Friday | ⑫ Saturday |
| ④ Weekends | ⑬ Sunday |
| ⑤ From Monday to Saturday | ⑭ Monday, Wednesday, Friday |
| ⑥ From Monday to Sunday | ⑮ Tuesday, Thursday, Saturday |
| ⑦ Monday | ⑯ Sunday to Thursday |
| ⑧ Tuesday | ⑰ Friday to Saturday |
| ⑨ Wednesday | |

5. Press [MODE], the LCD screen will display "EVENT OFF". Repeat steps 2-3 to set the end time for period 1.



Example: setting the end time to 5:30pm (also on Wednesday).