HYGIENE YOU

ATMOS

ADVANTAGE

- Silent operation low of noise reduction
- - Wall-mounted installation &

NEW GENERATION SCENT DIFFUSER





SPECIFICATIONS		
Product Size	W176*D85*H211.6mm	
Package Size	W214*D122*H292mm	
Power	7W	
Noise level	<46dBa	
Weight	1.4 kg	
Net Weight	0.87kg	
Suitable Coverage	Up to 1000cbm;300sqm;3000sqft	
Oil Consumption	2.6ml/h	
Colour	Black	
Voltage	DC 12V	
Installation	Wall-mounted/Free-standing	
Capacity	450ml	

HYGIENE YOU

ATMOS

INSTALLATION

Wall-mount Free-standing

Oil Consumption Data (Work 12h per day-450ml bottle)			
Work seconds(s)	Pause seconds(s)	Working (days)	
60	25	20	
60	60	28	
90	180	43	
90	300	62	
30	160	91	

Instructions for fragrance oil refill



1. Use the key to open the cover.



2. Remove the cap from the oil bottle and attach the atomizer.



3. Put the oil bottle and atomizer into the machine, close the cover.



4. Use the key to lock the cover, plug into a power supply and set the working time

Hygiene 4 you d.o.o. HOTO TOWER, Savska cesta 32, 10000 Zagreb, Croatia, EU

J +385 91 7921 152

www.hygiene4you.com |

PROPER PLACEMENT

ATMOS


>> SUGGESTED POSITIONING:

- √ Where guests first enter the space
- √ Near an area of high traffic volume
- Crossing the path of airflow from a duct
- √ In a discrete location
- √ Close to the ground when possible
- √ Within 10' (3m) of a power outlet

>> AVOID POSITIONING:

- Adjacent to exhaust vents
- Near doors opening to the outside
- x In an open window
- × Near an HVAC return grill
- × At face height when sitting/standing
- w Within reach of unattended children

Office Room

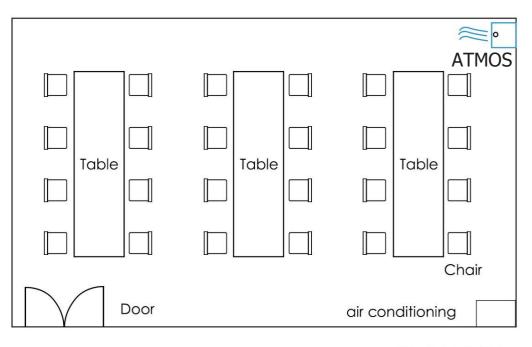

Hygiene 4 you d.o.o. HOTO TOWER, Savska cesta 32, 10000 Zagreb, Croatia, EU → +385 91 7921 152

Info@hygiene4you.com

www.hygiene4you.com

Coverge:300sqm